

HMI password

(20191216)

Password description

Model	Definition	Password	Description
RD320/RDC6331	Set factory para	CC8888	
	Set default para	HF8888	
RDC6331	communication setting	TX8888	
RDC6332/RDC6342	Set factory para	666888	
	Set default para	888888	
	Vendor paras	666888	
	communication setting	666888	
RDC6333/RDC6343	Set factory para	CC8888	
	Set default para	HF8888	
	Vendor paras	RD8888	
	communication setting	TX8888	
RDC6334/RDC6344	Set factory para	CC8888	
	Set default para	HF8888	
	Vendor paras	RD8888	
	communication setting	TX8888	
RDC644X	Set factory para	CC8888	
	Set default para	HF8888	

RDC6555G	Set factory para	CC8888	
	Set default para	HF8888	
	Vendor paras	RD8888	
	Lock keyboard	RD8888	default

